

# FCU3Mptools error code explanation

error code	explain
ERROR CODE ̣	Command sending failed, USB transfer error
ERROR CODE ̣	Failed to write to read-only table
ERROR CODE 6	Format failed
ERROR CODE 9	No capacity, Flash has no capacity or the capacity cannot reach U3 Require
ERROR CODE 15	Flash quality does not meet the current master control requirements, you can change it Other models master mass production
ERROR CODE 16	Boot can't get up after writing the table, some tables have problems and can't be found